

INSTALLATION INSTRUCTIONS

6910安裝說明

1. Use **Bracket** as template to locate appropriate drilling centers with pencil.

使用固定鐵片和鉛筆在預定鑽孔的位置,畫上記號.

2. Use 6mm drilling bit to drill holes in your marked locations to a depth 4cm, insert **Plastic Anchors** and make them be flushed.


當安裝在水泥牆,使用6mm鑽頭,鑽孔深度4公分,嵌入塑膠塞並使之齊平於牆面.

3. Fix **Bracket** on wall with **Screws**.

將固定鐵片以螺絲鎖在牆面上.

4. Locate **Main Body** on **Bracket** and secure with **Set Screw**.

在固定鐵片上面掛住產品本體,並以六角扳手由下方鎖緊固定螺絲,完成安裝程序.

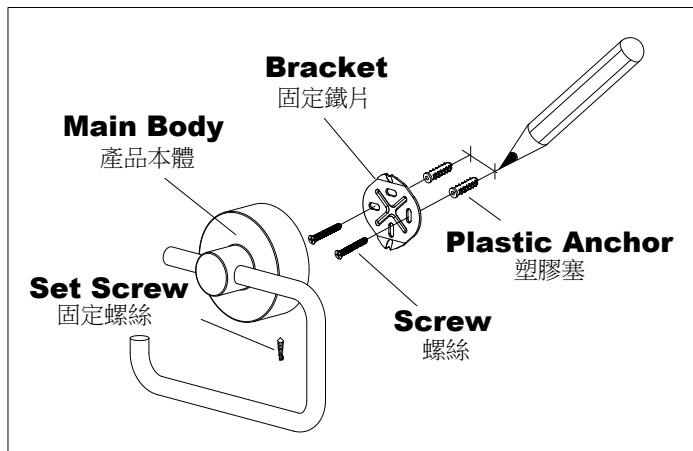

6910 SERIES:

